





INSTALLATION INSTRUCTIONS FOR V98PCA & VPHC20PC

Clogged screen filters can impede the unique venting features of SALCO's 20" Vented Hatch Cover. To ensure maximum performance from your covers, establish a regular inspection schedule to determine when screen filters should be cleaned or replaced.

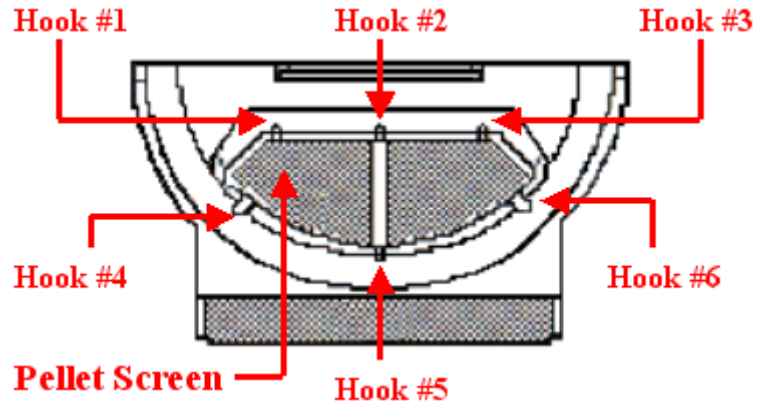

Removal Instructions:

1. Remove the center rivet from each screen by punching out the center pin. Then remove the rivet body.
2. Grip the inside (straight) edge of the pellet screen with both hands.
3. Pull the inside edge steadily toward you then upward until the center hook (Hook #2) releases.
4. Pull the center of the screen gently upward; pull Hook #1 toward you until it releases.
5. Slowly rotate the pellet screen clockwise to release the remaining hooks and free the screen.
6. Remove debris from the opening beneath the screens and debris that might have fallen upon the cover itself.

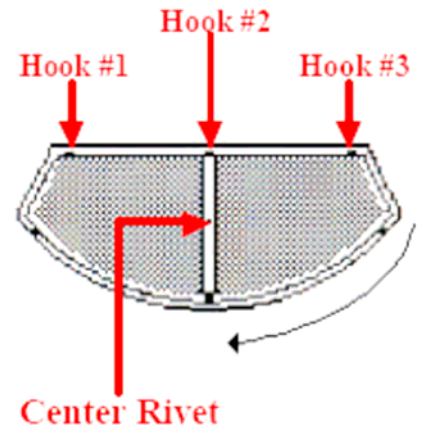

Replacement Instructions:

1. Slide Hooks #1 and #4 into place, then slide Hook # 5 into place.
2. Gently pull the center of the inside edge of the screen up and push Hooks #6 and #3 into place.
3. Push Hook #2 into place.
4. Firmly tap all edges of the screen to ensure that all the Hooks are securely in place.



SALCO PRODUCTS, INC.

PDP3.04.2 - Rev 5